



1. Packing List

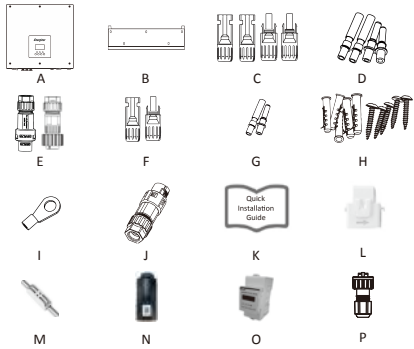

Object	Quantity	Description	Object	Quantity	Description
A	1	Inverter	I	1	Earth terminal
B	1	Bracket	J	1	Communication connector
C	4	PV connectors (2*positive, 2*negative)	K	1	Quick installation guide
D	4	PV pin contacts (2*positive, 2*negative)	L	1	CT (with 10m cable)
E	2	AC connectors	M	1	CT extension connector
F	2	Battery connectors (1*positive, 1*negative)	N	1	WiFi/LAN/4G (Optional)
G	2	Battery pin contacts (1*positive, 1*negative)	O	1	Meter (Optional)
H	5	Expansion tubes& Expansion screws	P	1	RS45


2. Inverter Installation

Please make sure the inverter will be installed with a proper distance as shown below.

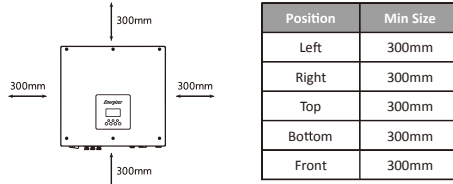

Step 1: Fix the bracket on the wall


Choose the place you want to install the inverter. Place the bracket on the wall and mark the position of the 5 holes from bracket.

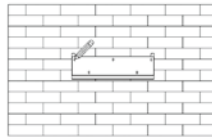

Drill holes with electric drill, make sure the holes are at least 50mm deep, and then tighten the expansion tubes.




Insert the expansion tubes into the holes and tighten them. Install the bracket with the expansion screws.

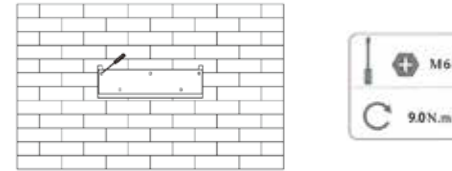

Step 2: Match the inverter with wall bracket

Hang the inverter over the bracket, slightly lower the inverter, and make sure the two mounting bars on the back are properly fixed with the two bracket grooves.

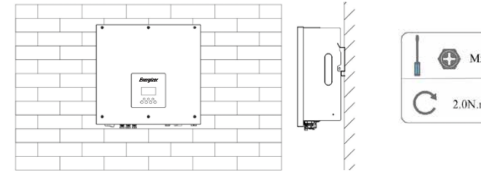

3. Collegamenti porta seriale

Il contatore e la RS485 devono essere collegati all'inverter tramite il connettore illustrato nella figura seguente. Tutte le porte del connettore devono essere collegate alle porte corrispondenti dell'inverter.




Port	PIN	1	2	3	4	5	6	7	8
CT/ Meter/ 485		Meter 485A	Meter 485B	485B	485A	CT2+	CT2-	CT1-	CT1+

Porte di comunicazione per il contatore

Nota:

- CT1: Per l'ibrido, CT2: Inverter collegato alla rete (se presente).  
Il rosso corrisponde a CT+, il nero a CT-.
- Tipo di misuratore compatibile: DDSU666 (CHINT), SDM230 (EASTRON).  
Le comunicazioni A e B sono contrassegnate sul lato del misuratore.
- Per le definizioni degli altri pin, consultare il manuale d'uso.

4. Typical Wiring Diagram

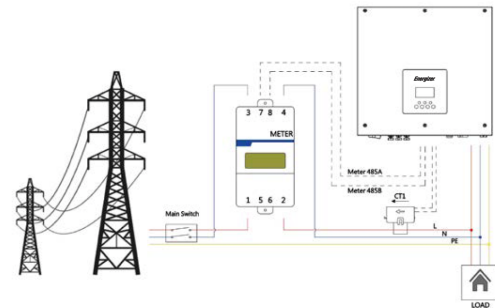


Meter type: DDSU666 (CHINT)

Please be noted that the load/inverter connections and grid connections are illustrated in the figure below. Port 10 is specifically for neutral connection.


5. Wiring Steps

PV Wiring

- Choose 12 AWG wire to connect the PV module.
- Trim 6mm of insulation from the wire end.

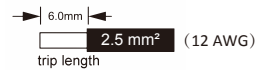

- Separate the DC connector (PV) as below.

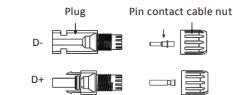

- Insert striped cable into pin contact and ensure all conductor strands are captured in the pin contact.

- Crimp pin contact by using a crimping plier. Put the pin contact with striped cable into the corresponding crimping pliers and crimp the contact.


- Insert pin contact through the cable nut to assemble into back of the male or female plug. When you feel or hear a "click" the pin contact assembly is seated correctly.




- Unlock the DC connector:
  - Use the specified wrench tool.
  - When separating the DC+ connector, push the tool down from the top.
  - When separating the DC- connector, push the tool down from the bottom.
- Separate the connectors by hand.

Battery Wiring

- Turn off the DC switch.
- Choose 8 AWG wire to connect the battery.
- Trim 6mm of insulation from the wire end.

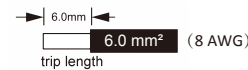

- Separate the DC connector (battery) as below.

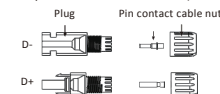

- Insert striped cable into pin contact and ensure all conductor strands are captured in the pin contact.


- Crimp pin contact by using a crimping plier. Put the pin contact with striped cable into the corresponding crimping pliers and crimp the contact.
- Insert pin contact through the cable nut to assemble into back of the male or female plug. When you feel or hear a "click" the pin contact assembly is seated correctly.
- Unlock the DC connector
  - Use the specified wrench tool.
  - When separating the DC + connector, push the tool down from the top.
  - When separating the DC - connector, push the tool down from the bottom.
- Separate the connectors by hand.

AC Wiring

Cable dimensions

Model (kW)	3.0	3.7	4.6	5.0	6.0
Cable (GRID)	8.0-10.0mm²				
Cable (EPS)	4.0mm²	4.0mm²	6.0mm²	6.0mm²	6.0mm²
Micro-Breaker	50A	50A	63A	63A	63A

- Trim all the wires to 52.5mm and the PE wire to 55mm.
- Use the crimping pliers to trim 12mm of insulation from all wire ends as shown in the picture.

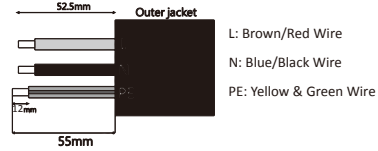

Note: Please refer to local cable type and color for actual installation.

- A. EPS Wiring
- Separate the EPS plug into three parts as below.
1. Hold the middle part of the female insert, rotate the back shell to loosen it, and detach it from female insert.
  2. Remove the cable nut (with rubber insert) from the back shell.



- Slide the cable nut and then the back shell onto the cable. Install the cable into the plug terminal and lock the screw, torque is (1.0+/-0.2 N.m).



- Push the threaded sleeve into the socket, tighten up the cap on the terminal.

9

- Push the threaded sleeve to connection terminal until both are locked tightly on the inverter.



- Loosen the cap on the terminal, pull the threaded sleeve out of the socket.




#### B. GRID Wiring

- Separate the GRID plug into three parts as below.
1. Hold the middle part of the female insert, rotate the back shell to loosen it, and detach it from female insert.
  2. Remove the cable nut (with rubber insert) from the back shell.




- Slide the cable nut and then the back shell onto the cable. Install the cable into the plug terminal and lock the screw, torque is (2.0+/-0.2 N.m).

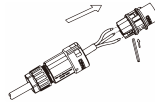


10

- Push the threaded sleeve into the socket, tighten up the cap on the terminal.
- Push the threaded sleeve to connection terminal until both are locked tightly on the inverter.

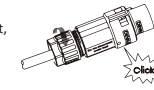


- Remove the AC connector: Press the bayonet out of the slot with a small screwdriver or the unlock tool and pull it out, or unscrew the threaded sleeve, then pull it out.

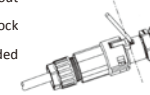

#### Grounding Wiring

Use the crimping pliers to press the ground cable into the ground terminal, screw the ground screw with screwdriver as shown below.

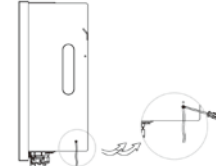


11

#### BMS Connection


Step 1: Prepare a standard network cable and cable connector, then insert the network cable through the cable connector.



Step 2: Crimp the cable with a RJ45 plug which is inside of the cable connector.

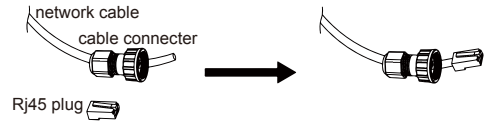

Step 3: Insert the cable connector into BMS port at the bottom of inverter.

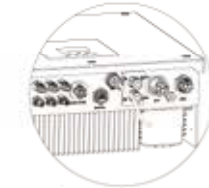

12

## 6. Inverter Start-Up

Please refer to the following steps to start up the inverter.

1. Ensure the inverter fixed well on the wall.
2. Make sure all wirings are completed.
3. Make sure the meter is connected well.
4. Make sure the battery is connected well.
5. Make sure the external EPS contactor is connected well (if needed).
6. Turn on the PV/DC switch, AC breaker, EPS breaker and battery breaker.
7. If the main page shows "off mode", please long press "enter" bottom to quickly go to the START/STOP page and set it to start. (Enter the settings page, default password is '0000').

Note:

- When starting the inverter for the first time, the country code will be set by default to the local settings. Check if the country code is correct.
- Set the time on the inverter using the button or by using the APP.

13

## 7. Inverter Switch Off

Please refer to the following steps to switch off the inverter.

1. Enter the settings page, select START / STOP and set it to stop.
2. Turn off the PV/DC switch, AC breaker, EPS breaker and battery breaker.
3. Wait 5 min before you open the upper lid (if in need of repair).

Note:

The ethernet port under inverter is only for local monitoring use (Via register), LAN connection need to purchase an separate product Smart LAN.

The inverter installation is complete. For battery installation, please refer to battery quick installation guide.

14

15

16